



For this project you will need:

(Pre-wash your fabric)

1 Piece of fabric 17' wide x 17 ½' height

1 Contrasting fabric 17' wide x 17 ½' height

1 Piece of batting 17' wide x 17 ½' height

1 Piece of contrasting fabric 17' wide by 10' height for pocket

Coordinating thread

Basic sewing supplies, sewing machine, sheers, etc.

Preferred but not required, rotary cutter and mat


Step One:

Cut 2 pieces of fabric. One for front and one contrasting for the back. 17' wide x 17 ½' in height.


Cut one piece of batting the same size.

Step Two:

For the Pocket cut one piece of fabric 17' wide x 10' height.

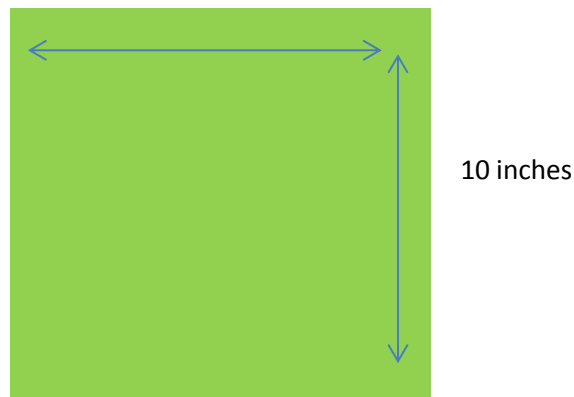

Fold piece in half (wrong sides together) so that it is now 17' x 5'. Iron at fold.

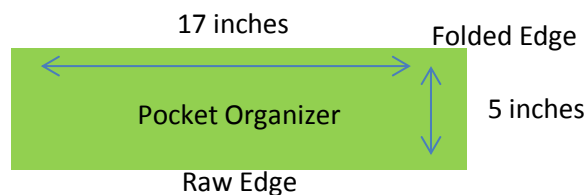

Step Three:

****Be sure to follow these *exact steps* when lining up the fabric.**

Lay batting down first. Lay back piece of fabric on top of batting so that right side is facing up.


Lay Pocket on top.

Lay front piece of fabric on top with wrong side facing up.



Step Four:

With all your pieces of fabric stacked, the **wrong side front piece** should be facing up. Sew up the sides and bottom.

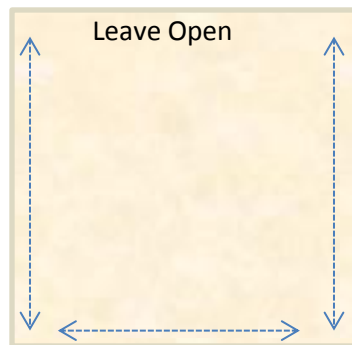


Step Five:

After you have sewn the 3 sides, turn inside out so that the front pocket is on top of the front piece of fabric.

Fold in top raw edge about $\frac{1}{4}$ inch and baste or sew closed.

Baste or sew raw edge closed

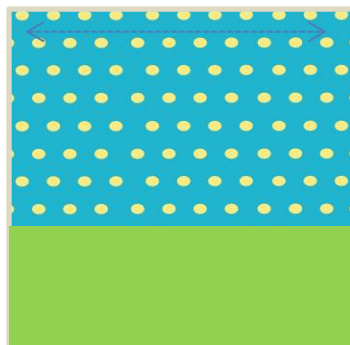

Step Six:

Sew straight lines on Pocket to create several pockets.

